

SWISSLOG HEALTHCARE

## Nexus™ Station for TransLogic® Pneumatic Tube System Specification



The Nexus Station represents the next generation of pneumatic tube system (PTS) stations, providing quiet delivery and improved carrier management through a turnstile that manages both send and receive actions.

### Features

- Carrier management technology supports:
  - Quiet operation for use in sensitive patient-care areas (e.g., ICU)
  - Longer carrier life due to elimination of carrier-to-carrier contact
- Secure transaction management supports:
  - Multiple, locally stored, secure payloads
  - Multiple transaction processing to improve user workflow efficiency
  - Medication safety and control
- Active carrier management supports delivery of critical samples and medications
- Re-use of existing station housing and infrastructure facilitates low-impact upgrades
- Nexus Control Panel Technology provides user-friendly access and messaging
- Easy-to-clean surfaces promote disinfection and infection control:
  - No absorbent materials
  - Spill containment features to capture payload leakage

**swisslog**  
healthcare

## Easy Installation

The Nexus Station is designed for easy installation in new construction, renovations and upgrades.

## Applications:

- Compatible with 6-inch systems
- Works with TransLogic, and converted Quantum and competitive systems
- Retrofits to existing systems; install into existing TransLogic Standard Recessed 6-inch station wall opening
- Card access and radio frequency carrier identification are standard
- External carrier arrival indicator optional

## Specifications

**Carrier Capacity:** 5 (same as dispatch slots)\*  
 \*Station is considered "full"


**In-Station Carrier Storage:** 8 (not including shelves)

**Payload Capacity:** (6-inch carrier with contents) 8 lbs

**Power Requirements:** 105 to 125 VAC, 60 Hz, single phase, 3A, unswitched, terminated at in-station Swisslog-supplied duplex outlet

**Control Requirements:** Ethernet only, Cat5e or better

Through its innovative design and quiet delivery, the Nexus Station provides increased flexibility for secure transport, while offering active carrier management for increased flexibility.

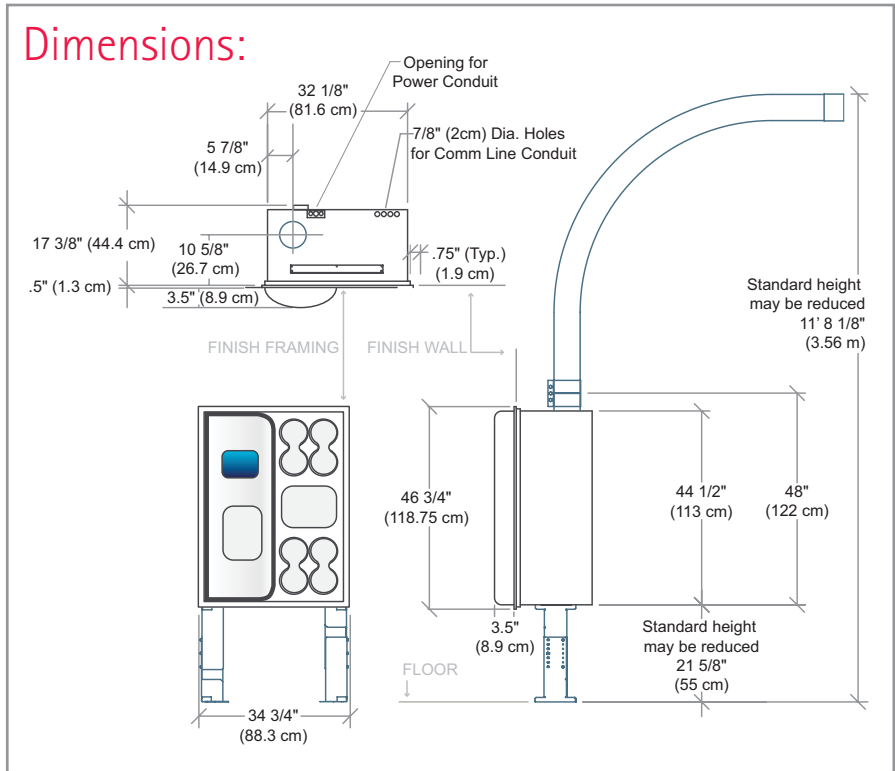

Swisslog conducts ongoing product improvements, therefore technology designs may change without notice or obligation.

TransLogic and Nexus are registered trademarks or trademarks of Swisslog AG.  
 Swisslog systems may be covered by one or more patents. See [swisslog.com/patents](http://swisslog.com/patents) for details.

Swisslog Healthcare  
 healthcare.us@swisslog.com  
 800.764.0300  
 Canada: 877.294.2831 | 905.629.2400

[swisslog.com/translogic](http://swisslog.com/translogic)

